




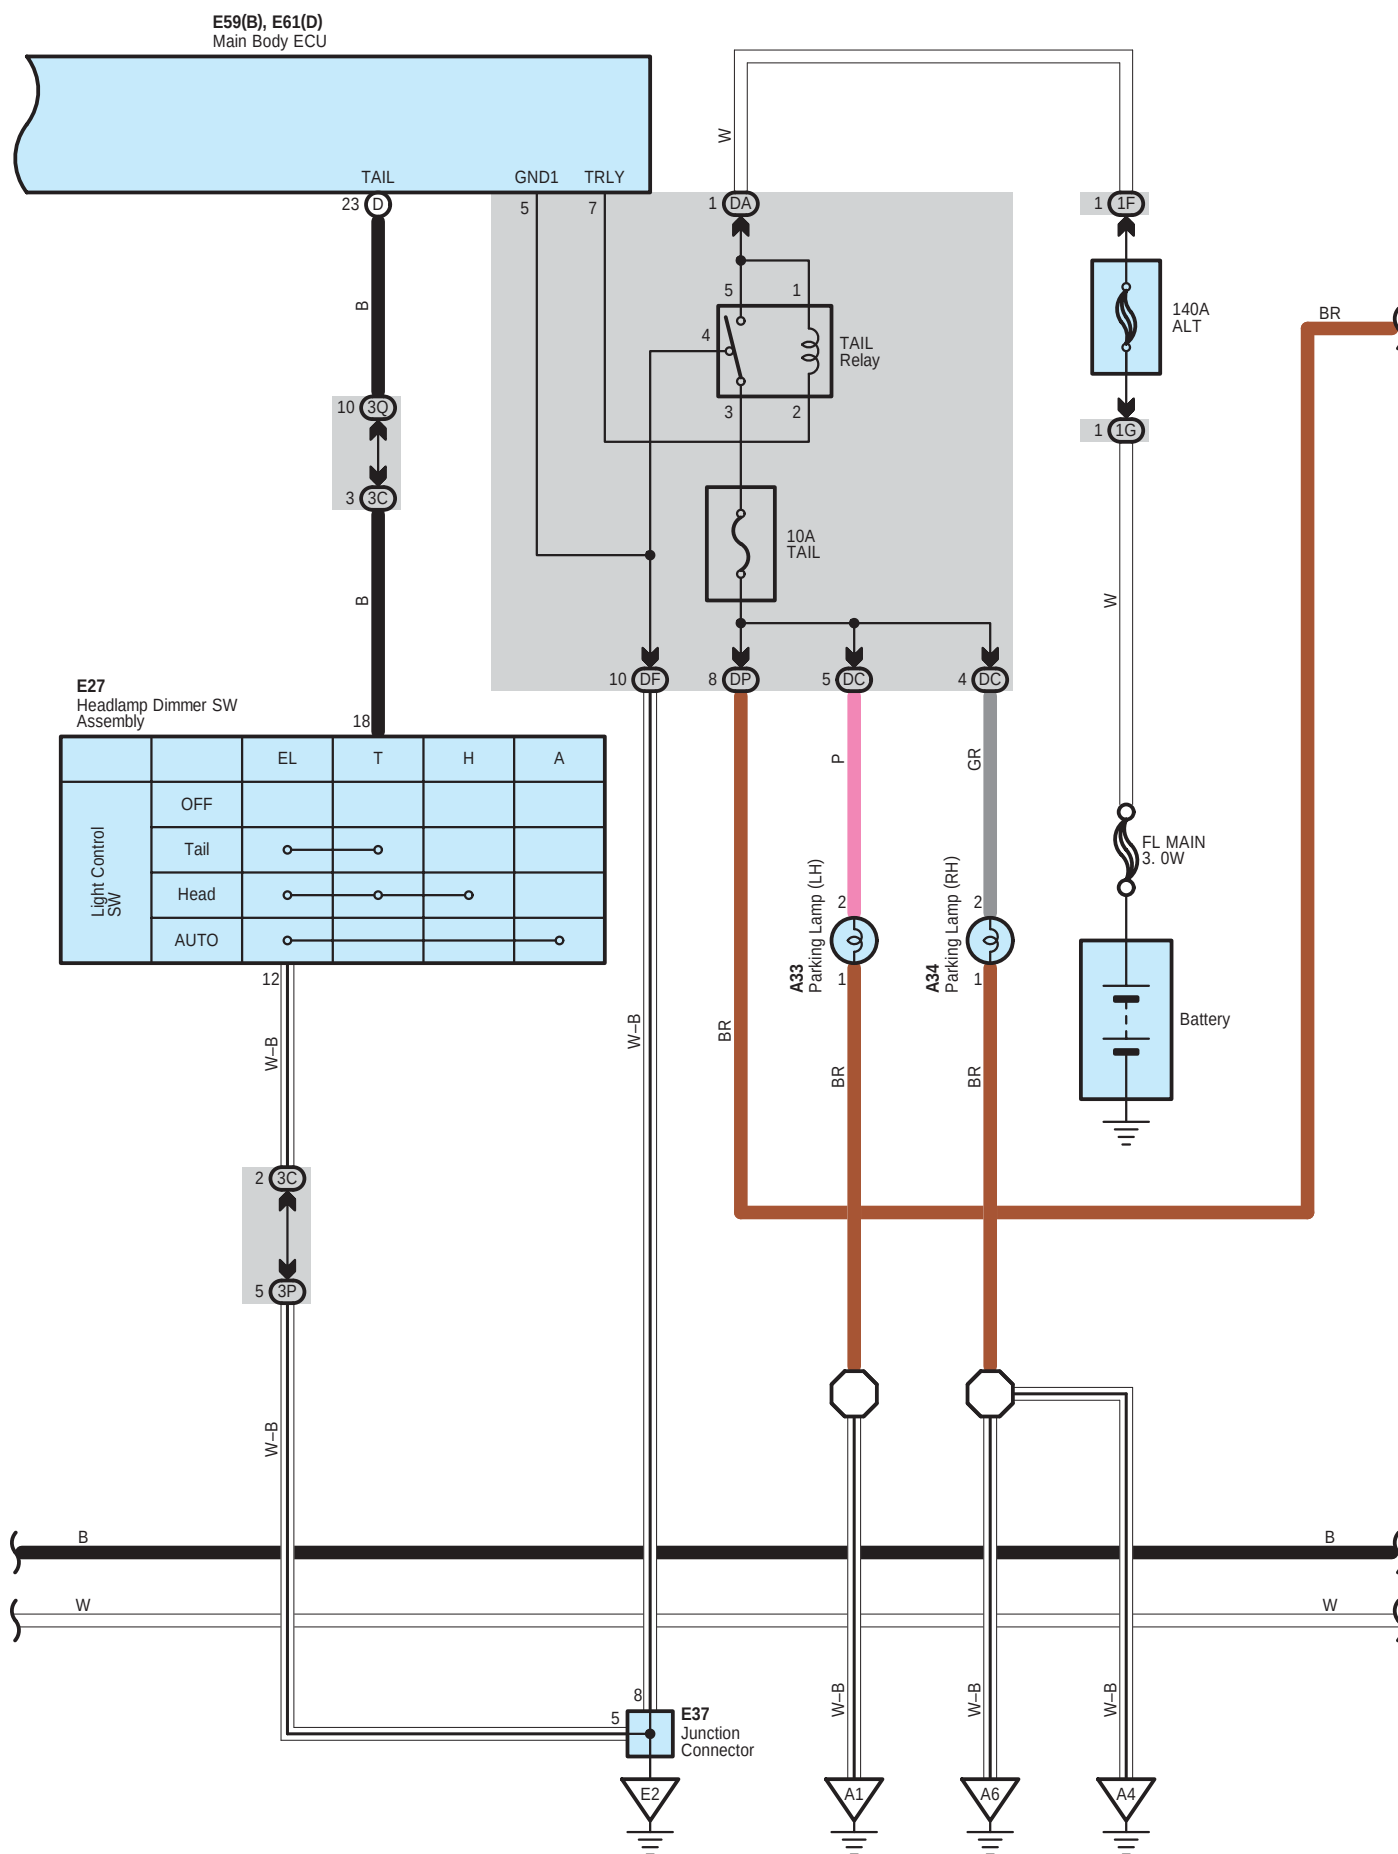

Taillight

- * 1 : Except USA
- * 2 : w/o Rear Fog Light
- * 3 : w/ Side Marker

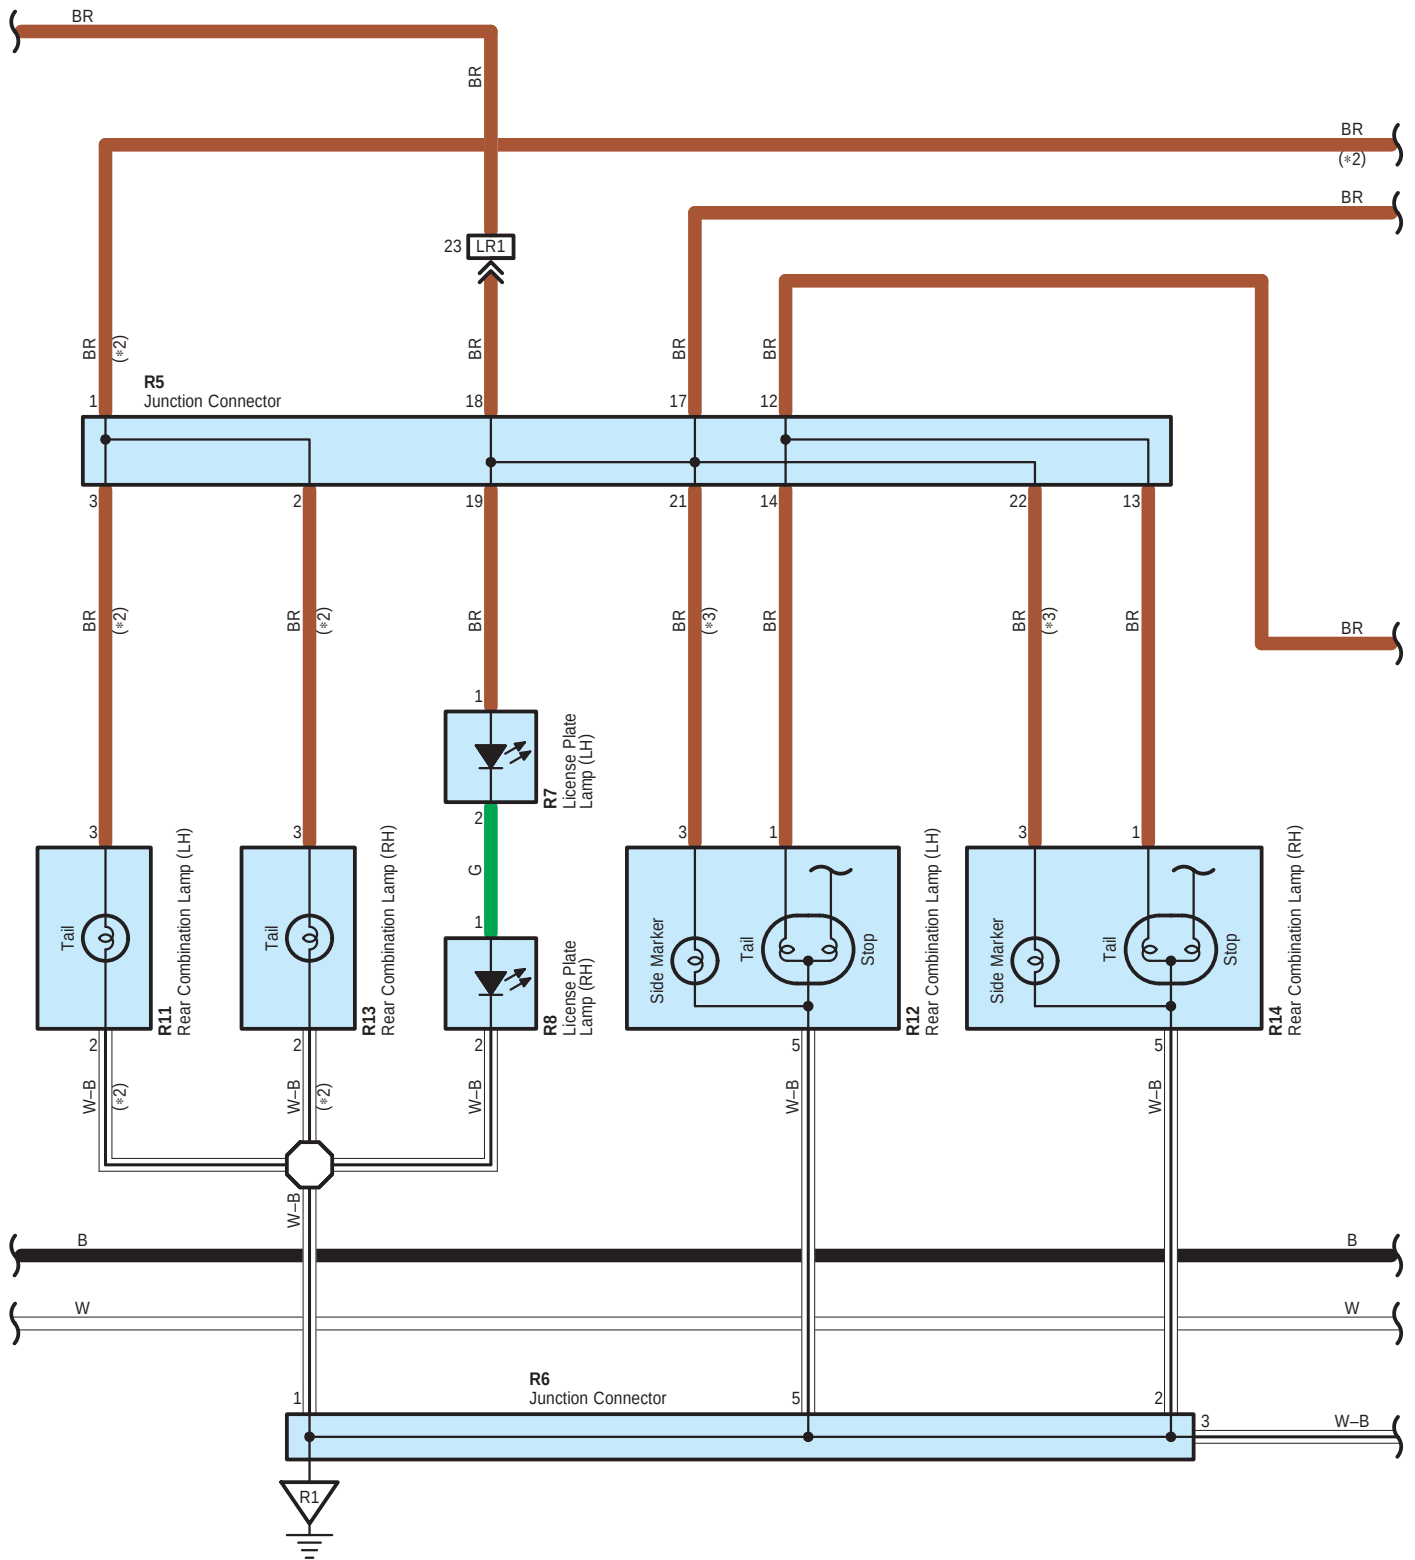

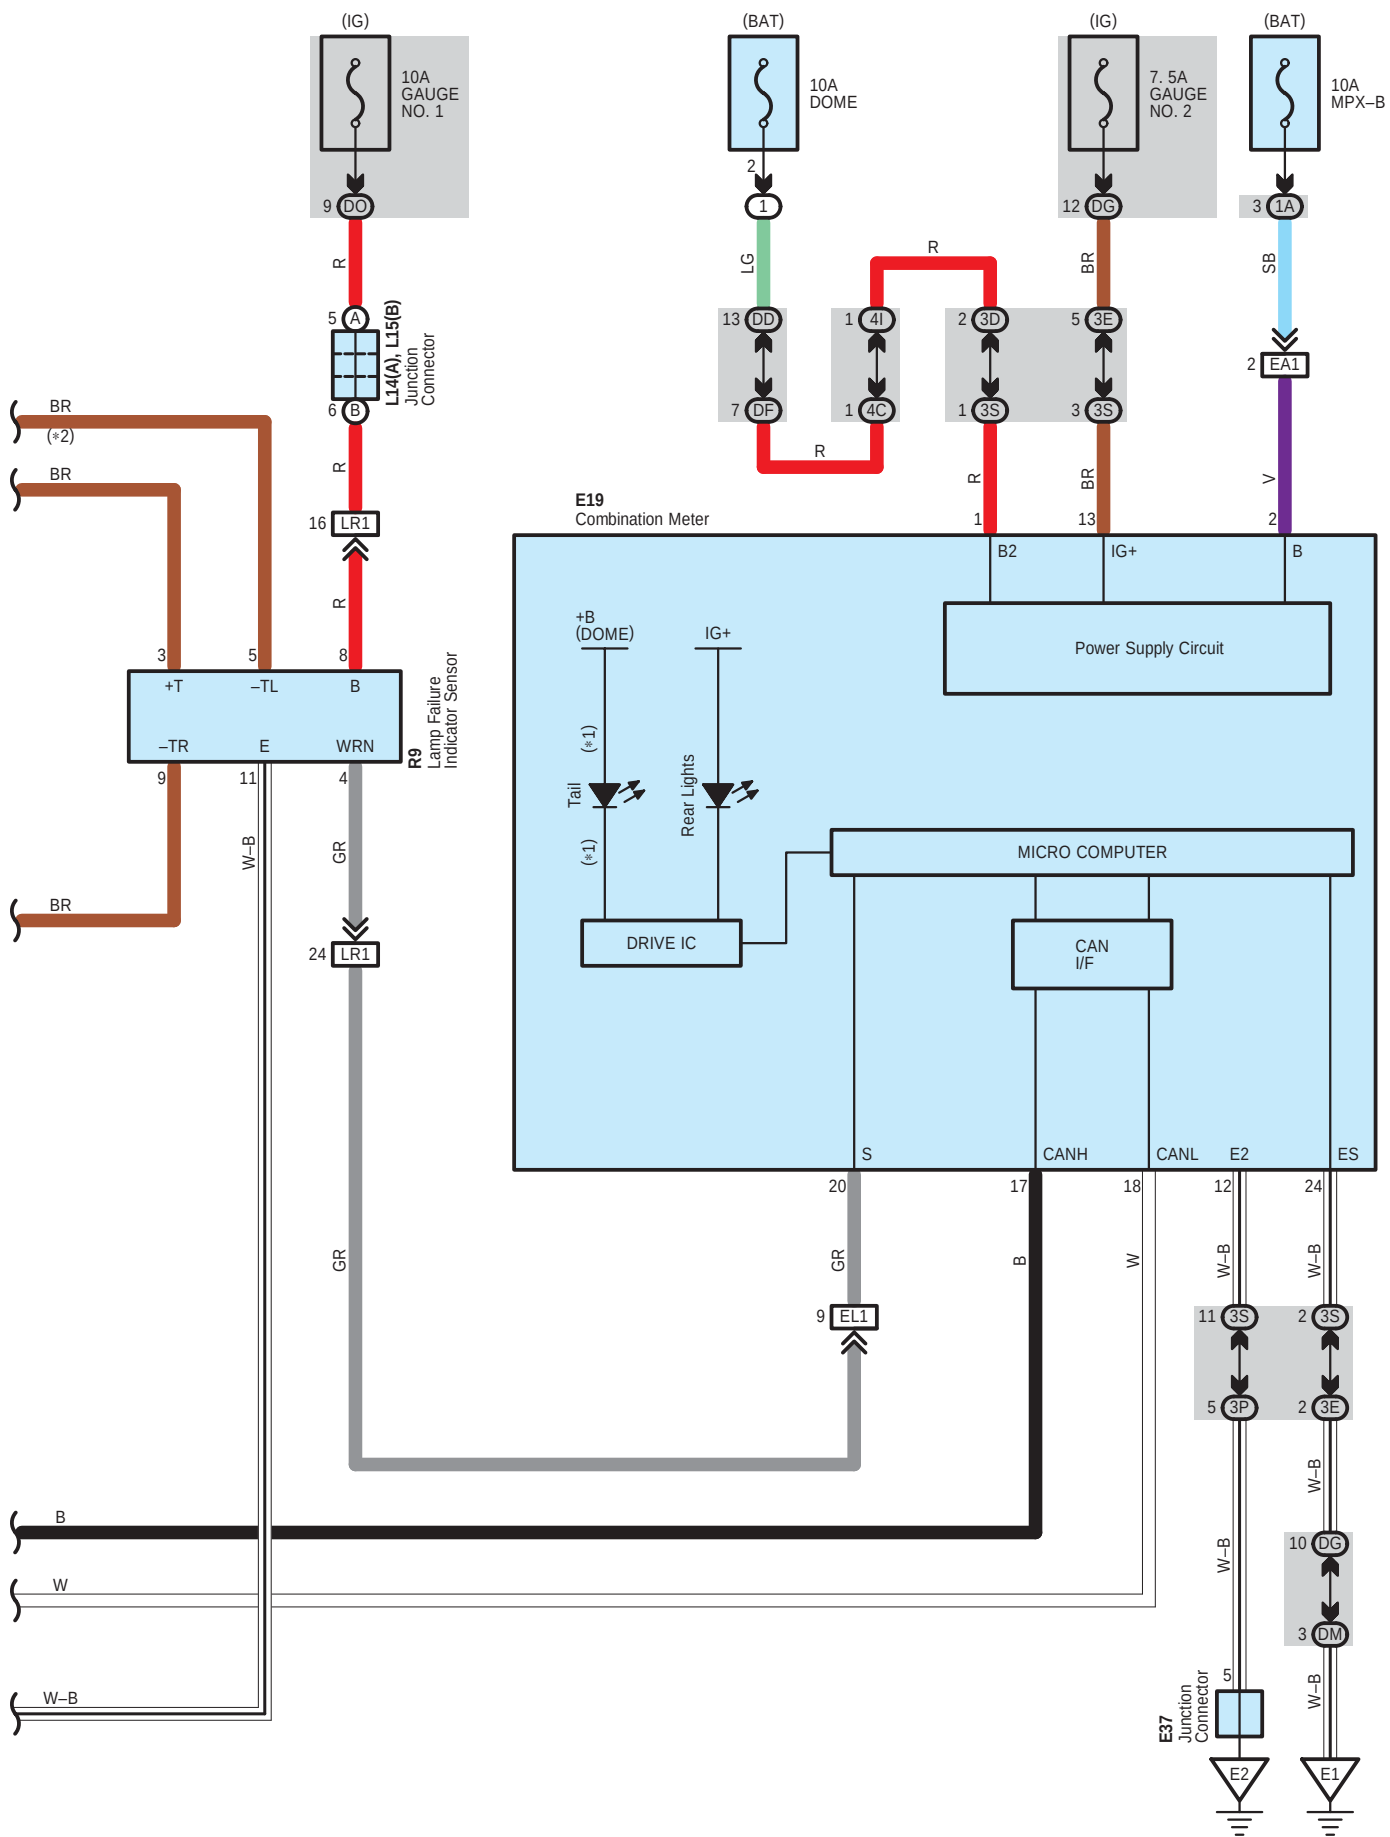

Taillight

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A33	54	E59	B 59	R8	65
A34	54	E61	D 59	R9	65
E19	58	L14	A 62	R11	65
E27	58	L15	B 62	R12	65
E37	58	R5	65	R13	65
E43	B 48, 59	R6	65	R14	65
E48	G 48, 59	R7	65		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1F	22	
1G		
3A	36	Instrument Panel Wire and J/B No.3 (Instrument Panel Left)
3C		
3D		
3E		
3P		
3Q		
3S		
4C	42	Instrument Panel Wire and J/B No.4 (Instrument Panel Right)
4I		
DA	30	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
DC		
DD		
DF	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
DG	31	
DM	30	
DO	30	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
DP		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	69	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
EL1	69	Instrument Panel Wire and Floor Wire (Left Kick Panel)
LR1	70	Floor Wire and Luggage Room Wire (Roof Side Rear Inner Panel LH)

: Ground Points

Code	See Page	Ground Points Location
A1	68	Front Left Fender Apron
A4	68	Front Right Fender Apron
A6	69	Cowl Side Right
E1	69	Left Side of the Instrument Panel Reinforcement
E2	69	Instrument Panel Brace LH
R1	70	Roof Side Rear Inner Panel LH

